

Electric Cap Press User Manual

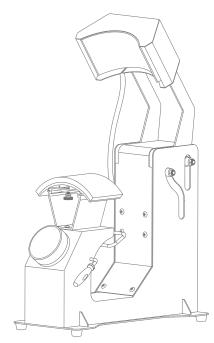


Accessories are optional for different sizes of caps

Warnings must be followed carefully to avoid body injury.

Introduction

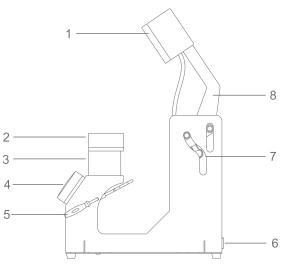



1. Heating plate 2. Cap support 3. Cap support seat 4. LED switch 5.Cap holder 6.Power socket 7.Guide wheel 8.Bracket

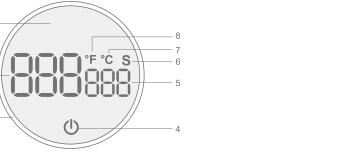

1.Translucent cover 2.Temperature display 3.Knob switch 4.Start button 5. Time display 6. Time unit 7. Centigrade 8. Fahrenheit

  Temperature unit conversion











- 2. Press and hold the start button for 6s. 3. Turn the switch to select the required temperature unit.
- 4. Short press the start button to start the machine.

Temperature setting

- 1. Turn the display half a turn to the right. 2.Enter the temperature setting mode after a beep sound
- 3. Turn the switch to the right to increase the temperature (+)
- 4. Turn the switch to the left to reduce the temperature (-)

Time setting

- 1. Turn the display half a turn to the left
- 2. Enter the countdown setting mode after a beep sound
- 3. Turn the switch to the right to increase the time (+)
- 4. Turn the switch to the left to reduce the time (-)

Getting Started



2.Startup

After power on, short press the power button to start the machine. After startup, the machine will automatically heat up.

3.Shutdown Press and hold the power button for 3s to shut down.

4.Auto shutdown

The machine will automatically shut down if there is no operation within 120min.

Replacement of cap support:



1.Select the cap support to

be replaced





2.Insert into the seat slot 3.Fix with screws



Transfer material: PET film Turn the switch to the right to set the temperature to 185℃. Turn the switch to the left to set the time to 25s.










1.Cap to be printed

3. The heating plate automatically presses down after pressing the button


Electrical diagram

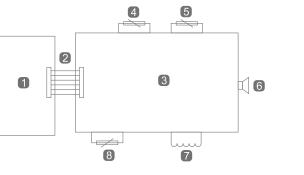

1 Main control 2 Connecting the 3 Power board 4 NTC temperature circuit board flat cable

5 Magnetic **6** Buzzer 7 Heating coil 8 Thermal Fuse switch

Wiring diagram of circuit board

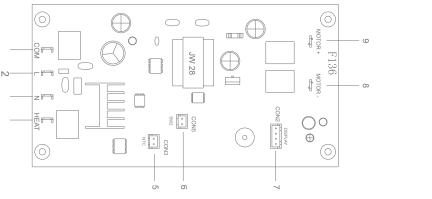

1.Output zero line 2.Input zero line

6. Sensor switch 7.Display

3.Input live line

8.Motor-4.Output live line 9.Motor+

5. Temperature probe

Guarantee

The products are strictly based on the Consumer Protection Law of the People's Republic of China and the Product Quality Law of the People's Republic of China. The services are as follows:

Within 12 monthsthis product has the performance failure listed in the Product Performance Failure Table". It is confirmed by manufacturer and can be used for maintenance service free of charge. If out of validity, damage caused by force maieure, or human causes, the machine is not covered by the warranty, repair in

Safety instruction

Before operating this unit, please read these instructions completely and save them.

- 1.Keep unplug when moving the machine. 2. Keep unplug when installing accessories.
- 3. Place on a flat and stable platform and operate under ventilated conditions.
- 4. Wear special protective equipment when operating the machine

Warning

Improperuse may result in electric shock, fire, personal injury and other damage.

- 1.Do not use this machine in ahazardouslocation.
- 2.Do not use when the machine is not working properly.
- 3.Do not allow children or adults who do not understand this manual to operate this machine.
- 4.Do not disassemble and repair this machine.
- 5.Do not use an unsuitable AC outlet.
- 6.Do not touch the heating plate when the machine heating



Basic parameters

Product name: Electric Cap Press Model: F136 Heating method: Heating coil Rated voltage/frequency: 120V~60Hz 350W

Temperature range: 40°C-205°C(104°F-401°F) Time range: 1-999s

Rated voltage/frequency: 220-240V~50Hz 310W

Warranty

Гуре	Items	Period
Whole machine	Parts of machine (excl. accessories)	1 year
Accessories		No warranty for consumables



4. The machine automatically opens after countdown