

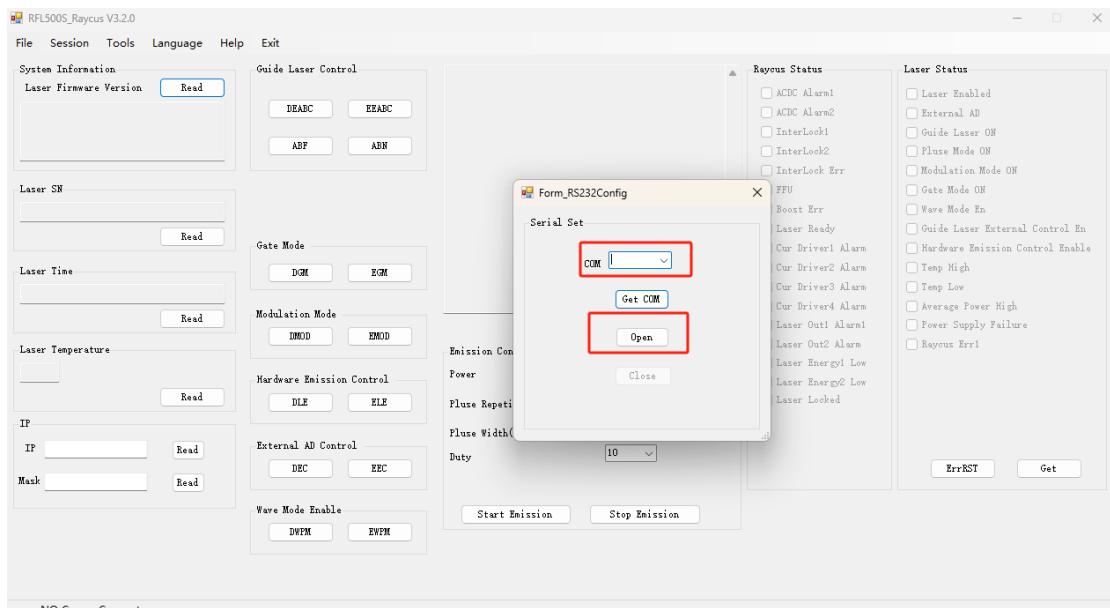



First。 Choose

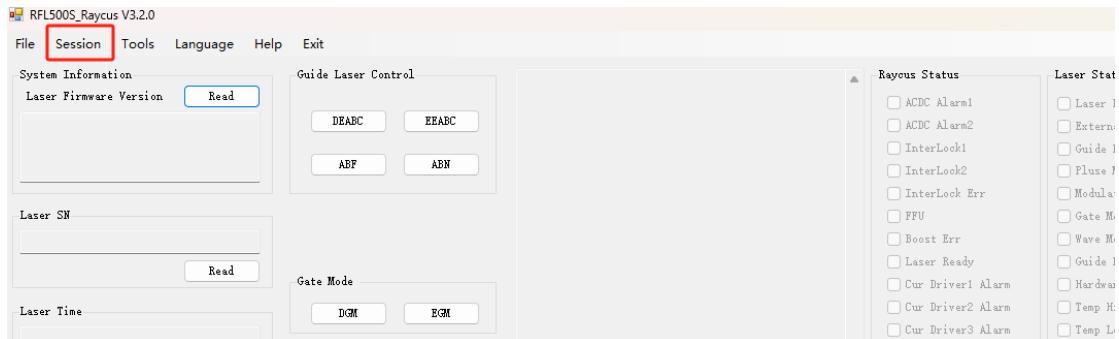


Then open RS232 port

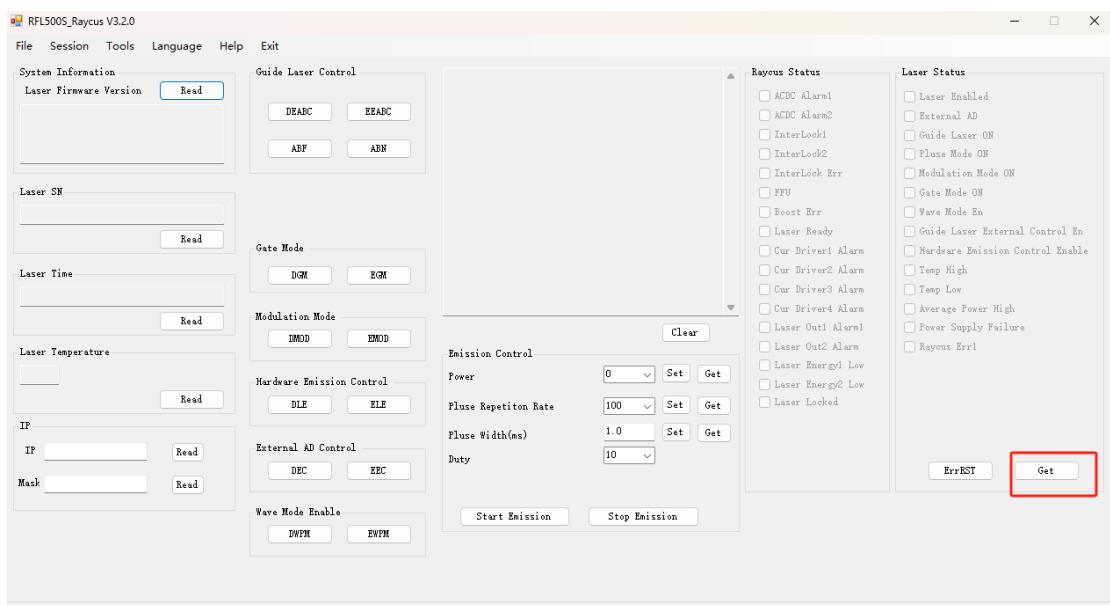


Get laser condition

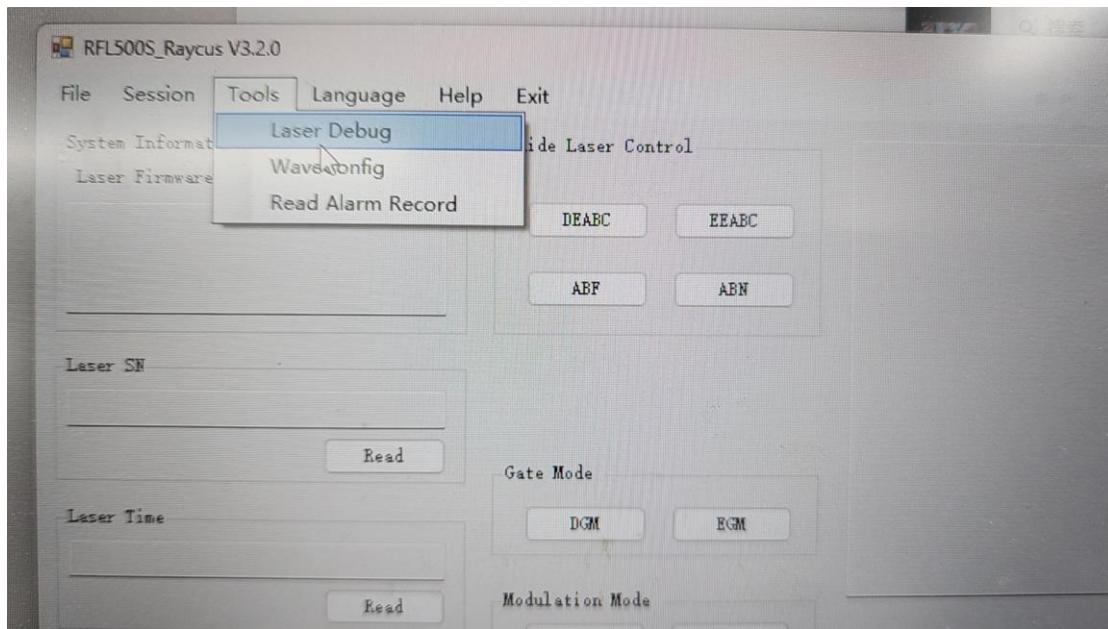


Click tools into laser debug PASSWORD 1234

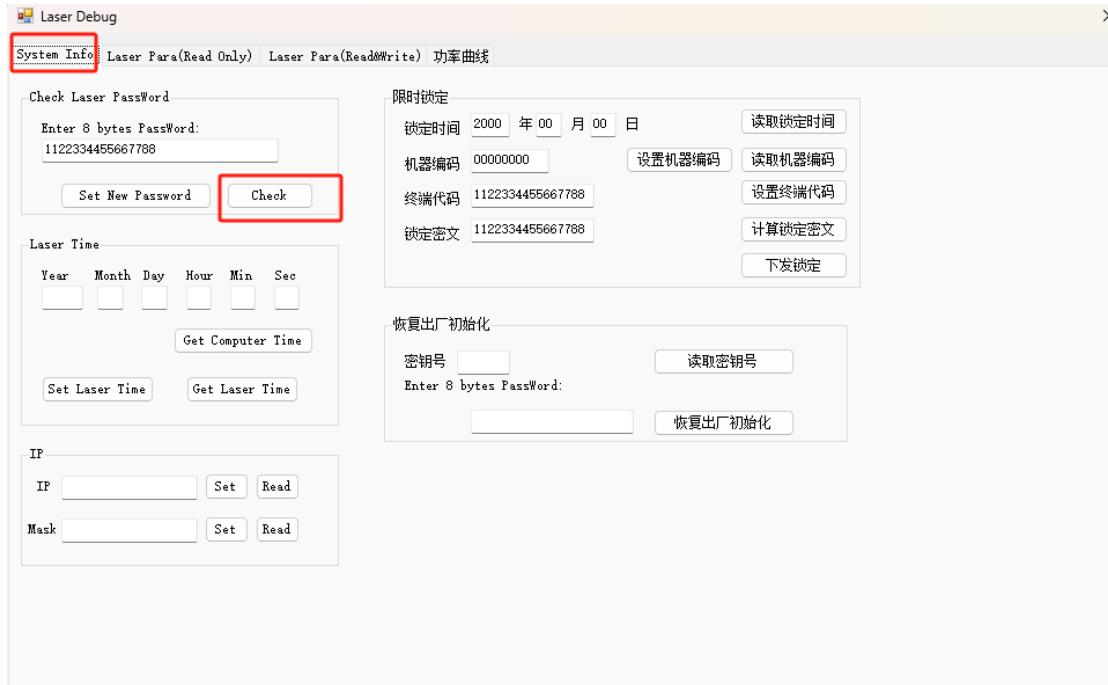


CHECK FIRST

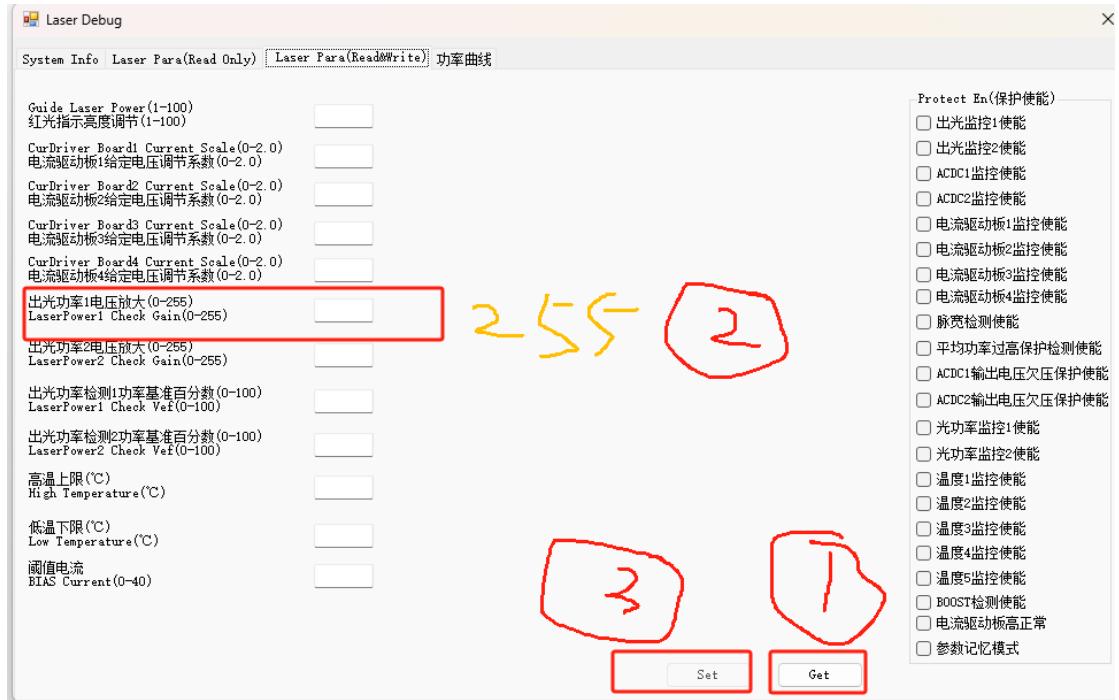

GET ----- Revised to 255 ----set

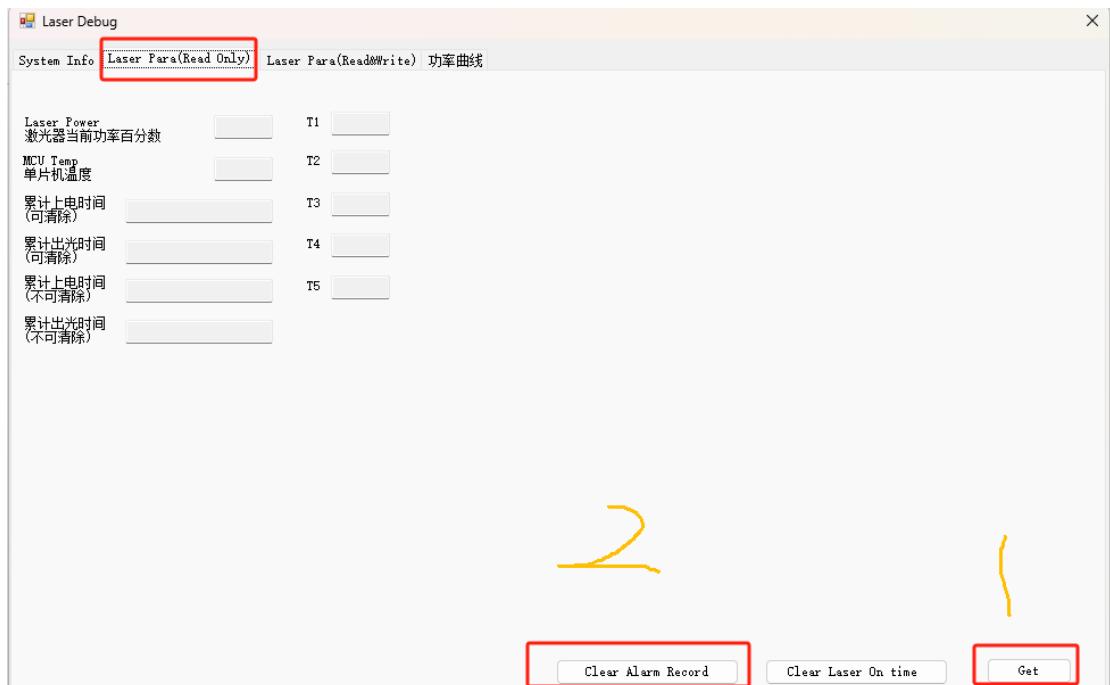

LASER PARA get then clear alarm record

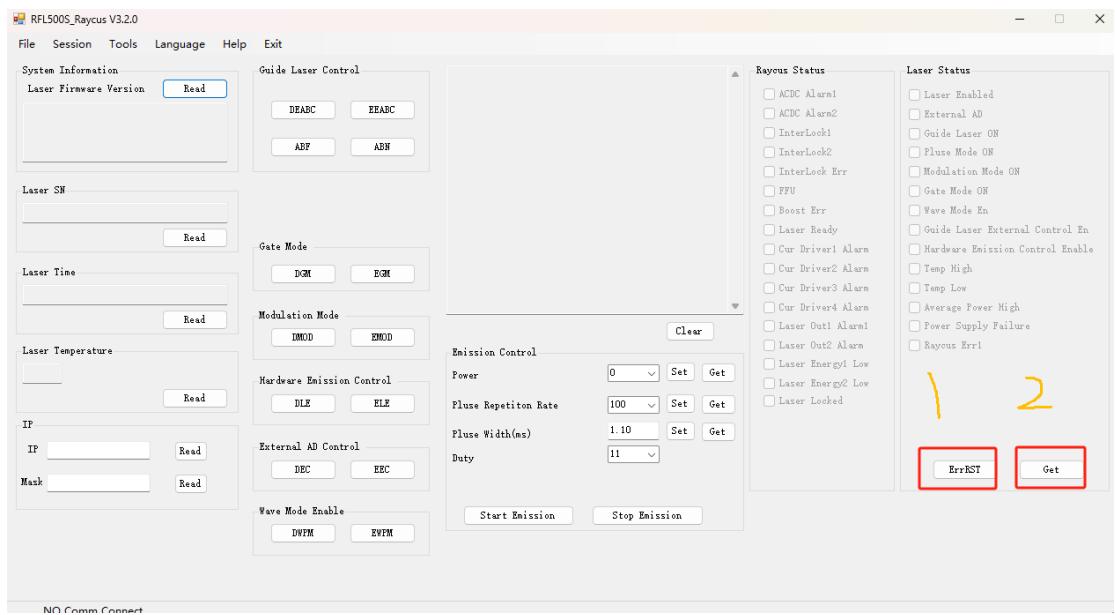

CLOSE LASER DEBUG THEN ErrRSET AND GET

Then take photos of this interface to raycus engineers.