


Howto Produce Designs Bigger Than Your Machine Demostration

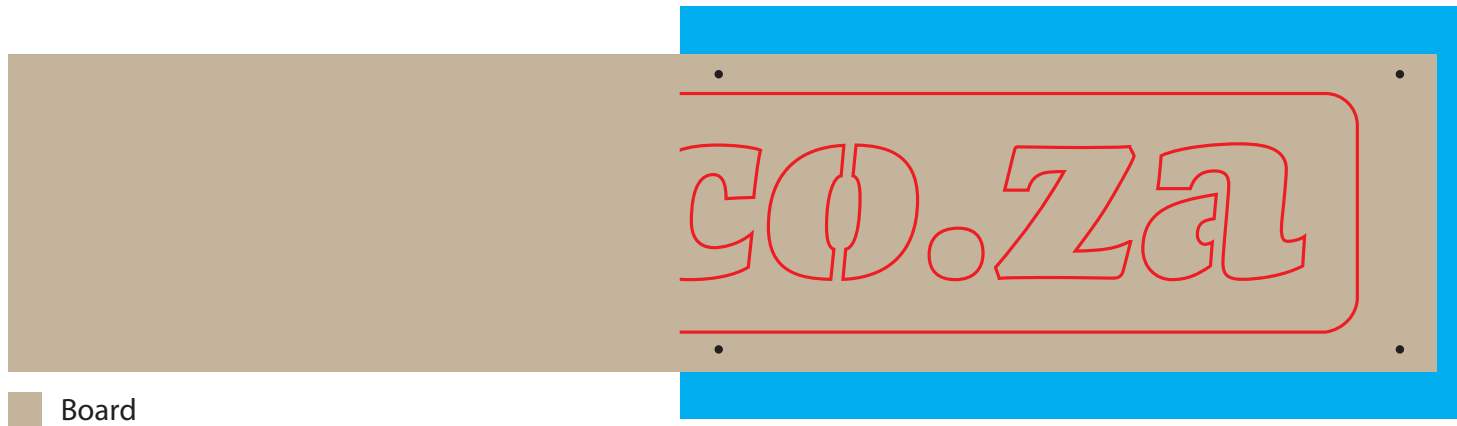


- Cut/Drill 4 Holes for Position
- Cut Through the Board and Into Spoilboard
Hole's Diameter is a Solid Round Bar You Have

First Time Cutting Path

CNC Machines

Move the Board, Match the Holes Position

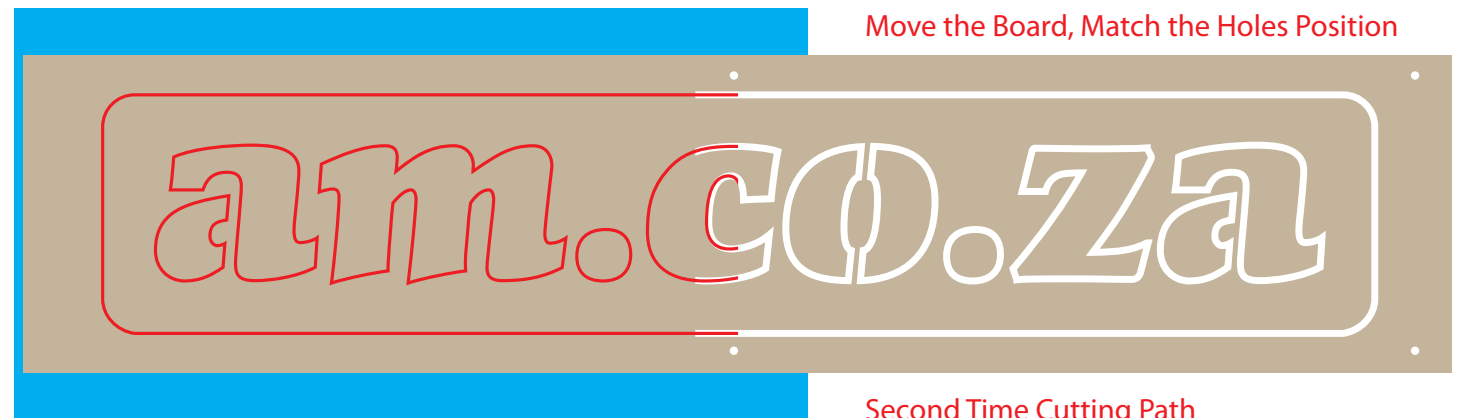

Second Time Cutting Path